

# TORRES



Shaft Torsional Vibration Analysis Service





## **Key Features**


- ◆Shaft torsional vibration analysis service using the new TORRES (TORsional vibration RESponese analysis) calculation program
- ◆Analysis based on both NK Rules and IACS UR M68

Evaluation of torsional vibration is essential for shafting system design. This is especially true for diesel engine driven shafting systems, as diesel engines generate exciting torque due to the internal combustion in each cylinder. ClassNK's PrimeShip-TORRES is a service for carrying out torsional vibration analysis and evaluation.

### **Evaluation criterion**


PrimeShip-TORRES is an analysis and evaluation service developed based on the wealth of knowledge contained in the ClassNK rules. PrimeShip-TORRES can be used to evaluate torsional vibration both at the design stage and during shafting system modification,

e.g. replacement of the propeller etc. This service is a vital tool for preventing damage caused by torsional vibration.

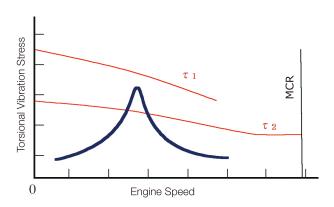

## Evaluation of essential items relevant to torsional vibration

Evaluations are provided for all essential items related to torsional vibration, including torsional vibration stress, barred speed range and gear chattering, among other items.

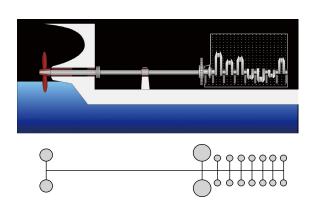





### Rule based evaluation criteria

All evaluations are carried out in accordance with Chapter 8, Part D of the ClassNK Rules and Guidance, as well as IACS UR M68.

## Comprehensive analysis reports

After the evaluations are completed, comprehensive analysis reports will be provided. Reports include diagrams of the torsional vibration stress and the engine speeds at which torsional vibration stress is generated, are diagrammatically as well as information on allowable stresses.

IASS No.	MASS NAME	1ST MODE	F(1) = 1084	98 (C.P.M.)		JLATION: Case F(2) = 2815.46		3RD MODE		[C.P.M.]
1	VIB. DAMPER	ORDER	STRESS [N/m	m1 SHAFT	ORDER	STRESS [N/mm <sup>†</sup> ]	SHAFT	ORDER	STRESS [N/mm*]	SHAF
2	FLANGE				1					
3	FLANGE				99		1 8			
4	#1 CRANKTHROW				39			•	196	
5	#2 CRANKTHROW	4TH MODE	F(4) = 439	0.1 [C.P.M.]	5TH MODE	F(5) = 8617.31	[C.P.M.]	6TH MODE	F(6) = 17010.6	[C.P.M.]
6	#3 CRANKTHROW	ORDER	STRESS [N/m	m] SHAFT	ORDER	STRESS [N/mm]	SHAFT	ORDER	STRESS [N/mm²]	SHAF
7	#4 CRANKTHROW	4.0	15.36	CRANK	4.0	6.31	CRANK	7.0	1.09	CRNI
8	#5 CRANKTHROW	3.0	6.03	CRANK	12			- 20		
9	#6 CRANKTHROW				19		12			- 9
10	#7 CRANKTHROW			*	-	•				-
			1		Ei.	2 ADDITIONAL S	STRESS DIA	GRAM		
11	#8 CRANKTHROW		- 1							
11	#8 CRANKTHROW FLYWHEEL		100		rig.	E / IDDITTOTOTE IE		1010 111		
			100		- 55	27.0011101010	J111200 011	1010411		7
12	FLYWHEEL			— : Cr	- 55	2 110011101112	7111200011	510 W		7
12 13	FLYWHEEL FLEX. COUPLING		100	— : Cr	- 55			J. W.		/
12 13 14	FLYWHEEL FLEX. COUPLING FLEX. COUPLING			— : Cr	- 55		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Olo W		<i></i>
12 13 14 15	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING		90	; Cr.	- 55		, , , , , , , , , , , , , , , , , , ,	Olo W		
12 13 14 15 16	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING		90	; Cr.	- 55			STO WE	/	
12 13 14 15 16	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	: Cr	- 55				/	
12 13 14 15 16	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	: Cr	- 55			CRANK	/	
12 13 14 15 16	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	; Cr.	ank				/	
12 13 14 15 16	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	; Cr.	ank				/	
12 13 14 15 16	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	; Cr.	ank					
12 13 14 15 16 17 18	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	; Cr.	ank					
12 13 14 15 16 17 18	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		90	; Cr.	ank					
12 13 14 15 16 17 18	FLYWHEEL FLEX. COUPLING FLEX. COUPLING FLEX. COUPLING FLANGE GEAR		stress (N/mm2) 80 90	; Cr.	ank	GEAR SHAFT				

600 800

400

10

V./3.0

ENGINE SPEED (RPM)

V/2.5

1000 1200 1400 1600 1800 2000 2200 2400 2600

VI/4.0

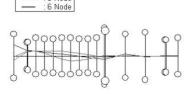


Fig.1 NOMAL ELASTIC CURVE

